

# CREST


## VERTICAL PLATFORM LIFT



**ReadyUPS System:** True battery back-up option that can deliver at least 5-cycles in the event of power loss.

**SteadyDrive:** Ensures a smooth, quiet and stable lift.

**Big Blue Paddle:** A 4" x 5" high contrast ergonomic rocker paddle control that makes operation easier.

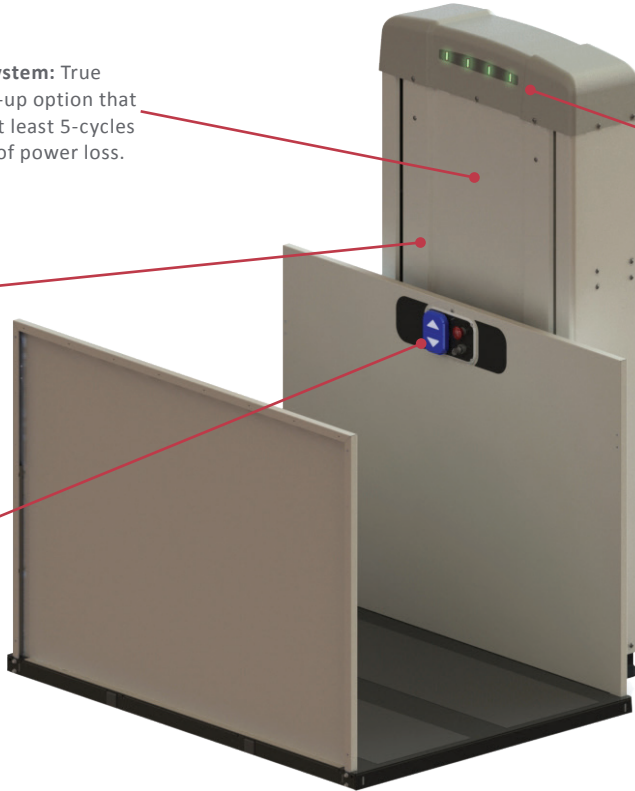

**Guardian System:** 4 bright, high-contrast LED status lights give continual performance feedback from the lift's control board. Monitoring almost every critical system, Guardian can provide immediate feedback and guidance.

### MAXIMUM LIFTING HEIGHT

- VPL400: up to 53"
- VPL600: up to 77"
- VPL800: up to 101"
- VPL1000: up to 125"
- VPL1200: up to 149"
- VPL1400: up to 171"

## VPL400-1400 PRODUCT SPECIFICATIONS

<b>CAPACITY</b>	750 lb	<b>SPEED</b>	10.4 FPM
<b>DRIVE</b>	<ul style="list-style-type: none"> <li>- ACME screw</li> <li>- 90V 2/3 HP fully sealed DC gear motor</li> </ul>	<b>POWER</b>	<ul style="list-style-type: none"> <li>115V AC</li> <li>15 AMP circuit breaker</li> </ul>
<b>PLATFORM SIZES</b>	<ul style="list-style-type: none"> <li>- VPL400-VPL600: 36" x 48" clear platform</li> <li>- VPL800-VPL1400: 36" x 54" clear platform</li> </ul>	<b>WARRANTY</b>	3-year limited
<b>CERTIFIED</b>	<ul style="list-style-type: none"> <li>- ETL listed</li> <li>- CSA B44.1/ASME A17.5</li> <li>- Safety standard ASME A18.1</li> <li>- Rated commercial and residential</li> </ul>	<b>FEATURES</b>	<ul style="list-style-type: none"> <li>- 4" x 5" constant pressure paddle control</li> <li>- Seal-Kor powder coat with stainless steel hardware for outdoor use</li> </ul>
<b>SAFETY FEATURES</b>	<ul style="list-style-type: none"> <li>- Safety pan beneath platform</li> <li>- 4-LED indicators in top cap</li> <li>- Emergency stop button in platform</li> <li>- Overspeed brake</li> <li>- Overload protection</li> <li>- Interlocks for doors/gates</li> <li>- Manual lowering tool</li> </ul>	<b>OPTIONS</b>	<ul style="list-style-type: none"> <li>- Battery backup UPS system</li> <li>- 36" or 42" platform gates with EMI interlock</li> <li>- Grab bar in platform</li> <li>- Fixed or auto-fold ramp</li> <li>- Fire-rated doors</li> <li>- Wired or wireless call/send controls</li> <li>- Lighted E-Stop with alarm</li> <li>- Key lock in platform</li> <li>- 3-stop with 3-button control panel</li> </ul>

